

Quick Start Guide



Thank you for purchasing the Teradici APEX 2800 server offload card by EVGA. This Quick Start Guide will help you to install and configure your APEX 2800 card.

Package Contents

- APEX 2800 card
- · Quick Start Guide (this document)

System requirements

- PCI Express x8 compatible card slot
- VMware ESXi 4.1 or 5.0
- VMware View[™] 4.6 or 5.0
- PCoIP Zero Client (3.4.x or later) or VMware View client (4.6 or later)
- Supported virtual machine operating systems:
- Windows XP
- Windows Vista
- Windows 7 (32 and 64-bit)
- PCoIP® protocol optimized network
- Maximum of two (2) Teradici APEX 2800 cards per server


Obtain the latest drivers at www.evga.com/support/download

EVGA.

© 2004-2012 Teradici Corporation. All rights reserved.

Teradici, PCoIP, PC-over-IP, and APEX are trademarks of Teradici Corporation and may be registered in the United States and/or other countries. All other trademarks are properties of their respective owners. Specifications are subject to change without notice. TER1104010-5

The Teradici APEX 2800 server offload card by EVGA is specifically designed to offload PCoIP image encoding from the server's CPU, significantly reducing CPU utilization and ensuring consistent application performance.

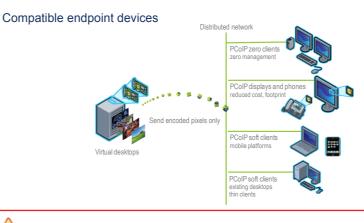

1. Always power down and disconnect devices from AC power before handling them, as some circuitry on the server PC can continue to operate even though the front panel power switch is OFF.

Failure to disconnect the device from AC power can result in personal injury or equipment damage.

Always ensure correct anti-static handling is observed to avoid potential ESD damage in the card.

Install the APEX 2800 card

- 1. Make sure all virtual machines hosted by the server are powered down or migrated to another server before continuing.
- 2. In the VMware vSphere client, right click on the ESXi server in the inventory and select **Enter Maintenance Mode**.

File Edit	View	Inventory Administration	Plug-ins Help					
🖸 🖸	6	New Virtual Machine	Ctrl+N	nd Clusters		S -	· Search In	wentor 🔍
1 6	6	New Resource Pool	Ctrl+O					
	- 36	New vApp	Ctrl+A					
0 🔁 ST	E	Disconnect						
8		Etter Maintenance Mode						
		Rescan for Datastores						
		Add Permission	Ctrl+P	-				
Recent Ta		Add Permission Alarm	Ctrl+P	e. Target or Status c	ontains: •			Clear >
	15			e, Target or Status c		1	Details	Libai •
Name		Alarm	,	e, Target or Status c	Stat	tus	Details	Clear >
Name Same Remo	- 6	Alarm Host Profile	,	e, Target or Status c	Stat	1	Details	Init
	- 6	Alarm Host Profile Shut Down	,	e, Target or Status c	Stat	tus Completed	Details	


- 3. Make sure the server is turned off and disconnected from AC power.
- Insert the APEX 2800 into a free PCI Express slot and secure the metal bracket.
- 5. Plug the server into a surge-protected AC outlet and power on.

Z Install the ESXi driver package

- 1. Enable remote login on the VMware ESXi server:
 - a. Press F2 to enter customization.
 - b. Enter your User name and Password.
 - c. Enable SSH.
 - ESXi 4.1
 - Select Troubleshooting Mode Options > Enable Remote Tech Support (SSH)
 - ESXi 5.0
 - Select Troubleshooting Mode Options > Enable SSH
- 2. Copy the driver package from your PC to the ESXi server using secure copy:
 - a. Download and install WinSCP (Windows Secure Copy) on your PC.
 - b. Start WinSCP and specify your ESXi server Host name (IP address), User name and Password.
 - c. Make sure the File protocol is SCP.
- d. Click Login.

Session Stored sessions Environment	Session Host name: 192.168.yyy.yyy	Port number:
- Directories SSH Preferences	User name: Pa	issword:
	Private <u>k</u> ey file:	
	Protocol <u>File protocol:</u>	
		Select color
Advanced options		

e. Drag the apex2800-*version*-esxi-*version-xxxxx*.zip package to the /tmp folder on your ESXi server.

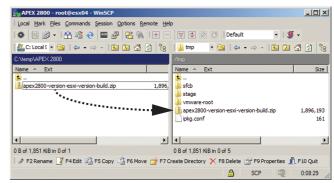

©2000-2012 EVGA Corp. EVGA, EVBot, the EVBot logo, the EVGA logo and combinations thereof are trademarks of EVGA Corp. All rights reserved Inc. All brands, products and companies are trademarks or registered trademarks of their respective companies. EVGA Corp. reserves the right to change product specifications without prior notice.



- Connect to the ESXi server using a SSH client (e.g. PuTTy) from your PC and install the driver package:
 - a. Navigate to the /tmp folder.
 - b. Enter the following command:
 - ESXi 4.1

esxupdate --bundle apex2800-version-esxi-version-xxxxx.zip update


The following message appears when the installation completes:

g ^R Putty	
<pre>/tmp # esxupdatebundle apex2800-version-esxi-version-build.zip update</pre>	
Unpacking cross_pcoip-ctrl_1 ##################################	[100%]
Unpacking cross_tera2_1.0.0-0 ###############################	[100%]
Unpacking cross_tera-compat-e ###################################	[100%]
Removing packages :tera2 pcoi ###################################	[100%]
Installing packages :cross_pc ###################################	[100%]
Running [/usr/sbin/vmkmod-install.sh] ok.	
The update completed successfully, but the system needs to be rebooted fo changes to be effective	r the
/tmp # reboot	

• ESXi 5.0

esxcli software vib install -d /tmp/apex2800-version-esxi-versionxxxxxx.zip

The following message appears when the installation completes:

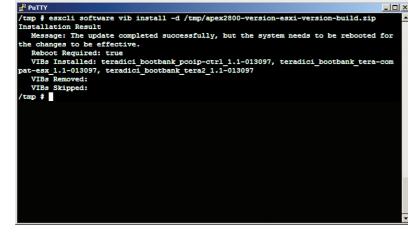

4. Reboot the ESXi server.

5. In vSphere client, right click on the ESXi server in the inventory and select Exit Maintenance Mode.

EVGA


© 2004-2012 Teradici Corporation. All rights reserved.

Teradici, PCoIP, PC-over-IP, and APEX are trademarks of Teradici Corporation and may be registered in the United States and/or other countries. All other trademarks are properties of their respective owners. Specifications are subject to change without notice. TER1104010-5

3 Install the virtual machine driver

Install the APEX 2800 virtual machine driver on each virtual machine.

- 1. Power up the virtual machine.
- 2. Open a console window to the virtual machine from vSphere client.

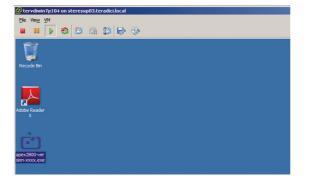

 Run the apex2800-version-xxxxx.exe installer on the virtual machine and follow the steps that appear.

(Note: This package **must** be installed from VM's Console in the vSphere client — it cannot be installed from within a PCoIP session to the virtual machine.)


4. After the installation completes, choose to reboot the machine later.

IMPORTANT

Make sure to power the virtual machine off and back on again. This ensures that ESXi will inspect the updated virtual machine image.

4 Verify global policies settings

- 1. Verify global policies settings in View Connection Server:
 - Make sure that PCoIP hardware acceleration is enabled in the Global Policies, if any policies inherit from it.
 - In any custom policies, make sure the option for enabling and disabling PCoIP hardware acceleration is set to **allow**.

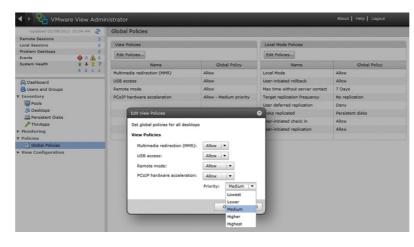

O View the APEX 2800 status


The APEX 2800 is now installed and configured.

- 1. Verify the working status of the Teradici APEX 2800:
 - ESXi 4.1

In your SSH session, enter the following command: pcoip-ctrl -I

• ESXi 5.0

In your SSH session, enter the following command: /opt/teradici/pcoip-ctrl -I

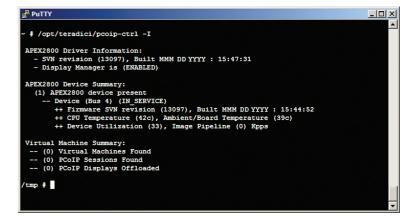

For further information, please refer to "Teradici APEX 2800 Administrator's Guide", available at http://techsupport.teradici.com.

Need more help?

Further information is available at http://techsupport.teradici.com

- · Free self-registration
- PCoIP documentation and FAQ
- · PCoIP network design checklist
- · PCoIP products download
- Support ticket requests

EVGA Warranty

This EVGA product has a 3 year limited warranty from the date of purchase. For more information please visit: www.evga.com/warranty

EVGA Corporation • 2900 Saturn Street, Suite B • Brea, CA 92821 EVGA Toll Free Number (888) 880-EVGA

©2000-2012 EVGA Corp. EVGA, EVBot, the EVBot logo, the EVGA logo and combinations thereof are trademarks of EVGA Corp. All rights reserved Inc. All brands, products and companies are trademarks or registered trademarks of their respective companies. EVGA Corp. reserves the right to change product specifications without prior notice.